User manual

CXD-4000

Table of content

1. Safety instructions 3
1.1. FOR SAFE AND EFFICIENT OPERATION 3
2. Technical data 4
3. CD Player functions 5
4. Connection 8

1. Safety instructions

- This device is suitable for indoor use only.
- All modifications to the device will void the warranty.
- Repairs are to carry out by skilled personnel only.
- Use only fuses of the same type and original parts as spare parts.
- Protect the unit from rain and humidity to avoid fire and electric shocks.
- Make sure to unplug the power supply before opening the housing.

1.1. FOR SAFE AND EFFICIENT OPERATION

Be careful with heat and extreme temperature

Avoid exposing it to direct rays of the sun or near a heating appliance.

Not put it in a temperature bellow 41°F /5°C, or exceeding 95°F /35°C.

Keep away from humidity, water and dust

Do not place the set in a location with high humidity or lots of dust.

Containers with water should not be placed on the set.

Keep away from sources of hum and noise

Such as transformer motor, tuner, TV set and amplifier.

To avoid placing on un-stable location

Select a level and stable location to avoid vibration.

Do not use chemicals or volatile liquids for cleaning

Use a clean dry cloth to wipe off the dust, or a wet soft cloth for stubborn dirt.

If out of work, contact sales agency immediately

Any troubles arose, remove the power plug soon, and contact with an engineer for repairing, do not open the cabinet by yourself, it might result a danger of electric shock.

Take care with the power cable

Never pull the power cable to remove the plug from the receptacle, be sure to hold the plug.

When not using the device for an extended period of time, be sure to disconnect the plug from the receptacle.

Important: **Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems. Make sure the electrical connection is carried out by qualified personnel. All electrical and mechanical connections have to be carried out according to the European safety standards.**

2. Technical data

Anti-Shock Buffer Memory		40 seconds
Features		Scratch Mode DSP Brake/Reverse
Pitch range		+ / - 16%
Playback media		Audio CD, CD-R, CD-RW, MP3
Connections Line Out		2 x USB-A 2 x unbalanced RCA
Power supply		~100-240 V, 60/50 Hz
Dimensions		482 x 90 x 255 mm
Weight		8 Kg

3. CD Player functions

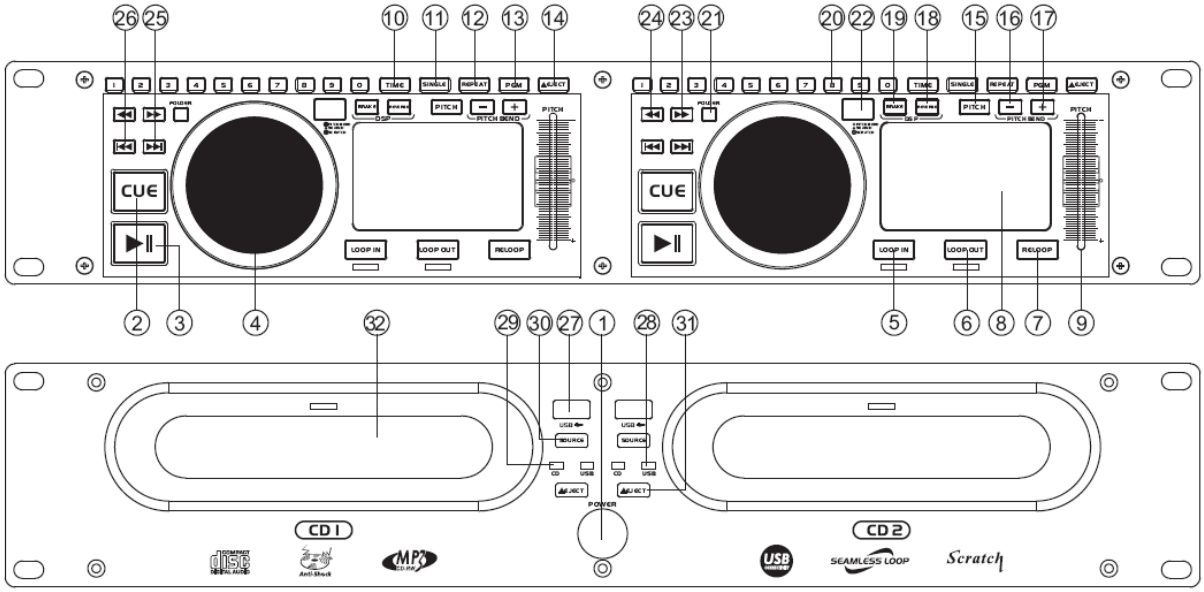

1. POWER BUTTON

   Press the power switch to turn on the unit. To switch the POWER off press the POWER switch again.

2. CUE BUTTON

   Pressing the CUE button during play provides a return to the position at which play was started.

3. PLAY/PAUSE BUTTON

   Each time you press the PLAY/PAUSE button, the operating changes from play to pause or from pause to play.

4. JOG & SHUTTLE WHEELS

   Shuttle: Use the dial to select the scanning direction and speed. The disc is scanned in the forward direction when the shuttle dial is turned clockwise from the neutral position, in the reverse direction when the shuttle dial is turned counterclockwise. The scanning speeds up when the shuttle dial is turned faster.

   Jog: In pause mode, if you turn the jog, the point at which the sound is being produced moves by a number of frames corresponding to the number of clicks. Clockwise moves the point forward; counterclockwise moves the point backward. In play mode, the jog increases or decreases the speed of the song. (clockwise: increase, counterclockwise: decrease).

5. IN BUTTON (LOOP SYTEM)

   This button sets the beginning of the loop. The Loop indicator on the display flashes.

6. OUT BUTTON (LOOP SYSTEM)

   When you press this button, you set the end point of the seamless loop and you start the loop. To finish the loop, press again this button.

7. RELOOP BUTTON (LOOP SYSTEM)

   This button is used to start the last saved loop. To finish the loop, press the reloop button.

8. DISPLAY

   LCD Display indicates the Track/Numbers/Time/Remain/Pitch/Continue/Single.

9. PITCH CONTROL

   Use this fader to increase or decrease the speed of the track. Slide up to decrease the pitch and slide down to increase the pitch.

10. TIME BUTTON

    Use this knob to choose the time mode: Elapsed time, remaining time or total remaining time.

11. SINGLE BUTTON

    Press this button to switch between the SINGLE and CONTINUOUS play mode. The selected mode is indicated on the LCD. In SINGLE mode, after each track, the unit stops the reading. In CONTINUOUS mode, the unit reads all tracks and stops.

12. REPEAT BUTTON

    Use this button to repeat one track or all the tracks of the CD.

13. PROG BUTTON

    In STOP mode, you can program several tracks (20 tracks max.):

    - Press the STOP button to enter the stop mode.
    - Press the PROG button to enter the program mode.
    - Use the skip track buttons to choose the track you want to listen then press the PROG button to enter your choice.
    - Use one more time the skip track buttons to choose the track you want to listen then press the PROG button to enter your choice
    - Repeat the operation to select all the tracks you want to listen to.
    - Press the PLAY/PAUSE button to start the playback.

14. EJECT BUTTON

    Press to load or eject disc. Each press will open or close the disc tray.

    NOTE: Disc holder will not open unless stop or pause button has been pushed first.

15. PITCH BUTTON

    If you push this button, the adjustment of the pitch potentiometer is available.

16. PITCH BEND - BUTTON

    The pitch will drop while the – button is pressed and return to the original pitch when it is released.

17. PITCH BEND + BUTTON

    The pitch will automatically rise when the + button is pressed and return to the original pitch when it is released.

18. DSP/REVERSE

    Push the reverse button to play your track in reverse, push the reverse button again to cancel this feature.

19. DSP/BRAKE

    In play mode you push the brake button at first and then push Play/Pause button, the operation changes its slowness from play to pause, push Play/Pause button again to cancel this feature.

20. DIRECT ACCESS BUTTONS

    Press 0-9 buttons, allow you to select the one track from the CD.

21. FOLDER BUTTON

    Allows you to navigate through folders similarly in either USB or CD mode.

22. TRACK SELECT BUTTONS

    Press the button to switch the function of jog dial to SEARCH and PITCH BEND and SCRATCH mode, when the indicator LED is off, dial the jog for pitch bend function. If the jog is unmoved for 8 seconds, the indicator is off. When the indicator LED is light, by rotating the jog wheel you can enter the scratch mode, while the indicator LED is flash, dial the jog for quick search forward and backward.

23. SEARCH BUTTON FORWARD

    Use this knob you can forward to navigation through one track.

24. SEARCH BUTTON BACKWARD

    Use this knob you can backward to navigation through one track.

25. SKIP BUTTON FORWARD

    Use this knob to select the next track

26. SKIP BUTTON BACKWARD

    Use this switch to re-start the track or to select the last track.

27. USB PORT

    Support USB playing and you may also connect the computer with the USB cable but only when enter into USB work mode.

28. When you enter into USB WORK MODE, the lamp can light.
29. When you enter into CD WORK MODE, the lamp can light.
30. SOURCE BUTTON

    Press this button to choose CD or USB mode while USB connect and the CDs in the tray.

31. EJECT BUTTON

    Press to load or eject disc. Each press will open or close the disk tray.

    NOTE: Disc holder will not open unless stop or pause button has been pushed first.

32. DISC-TRAY

    To enter the disc, please refer to the explanations under EJECT BUTTON.

4. Connection

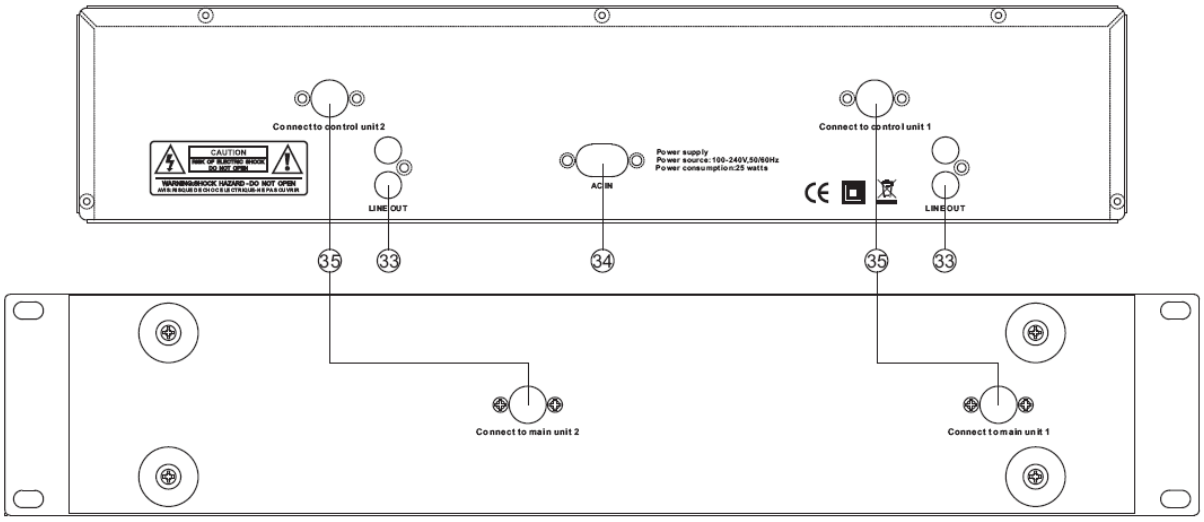

33. LINE OUT

    The audio for each CD player is an output for these jacks. Connect to the line input of the mixer.

34. AC CORD

    Use this cable to connect the AC mains power to the unit

35. DIN SOCKET 1-2

    Connect on this socket the mini-din cables provided with the CD player. Connect the player with the part of the controller.

Importer:

B & K Braun GmbH

Industriestraße 1

D-76307 Karlsbad

www.bkbraun.com

info@bkbraun.com